

Position the PRE2000PU close to the unit that it is to control. The PRE2000CU should be mounted in a 25mm or greater back box. The tank temperature sensor must be mounted to either the out going pipework using a pipe clip sensor or mounted directly to the tanks surface using thermal paste to ensure a accurate reading. Ensure that the PRE2000PU loadings are not exceeded.

